


**Use when the Exit Number/Suffix
is 3 to 4 numbers or letters.**

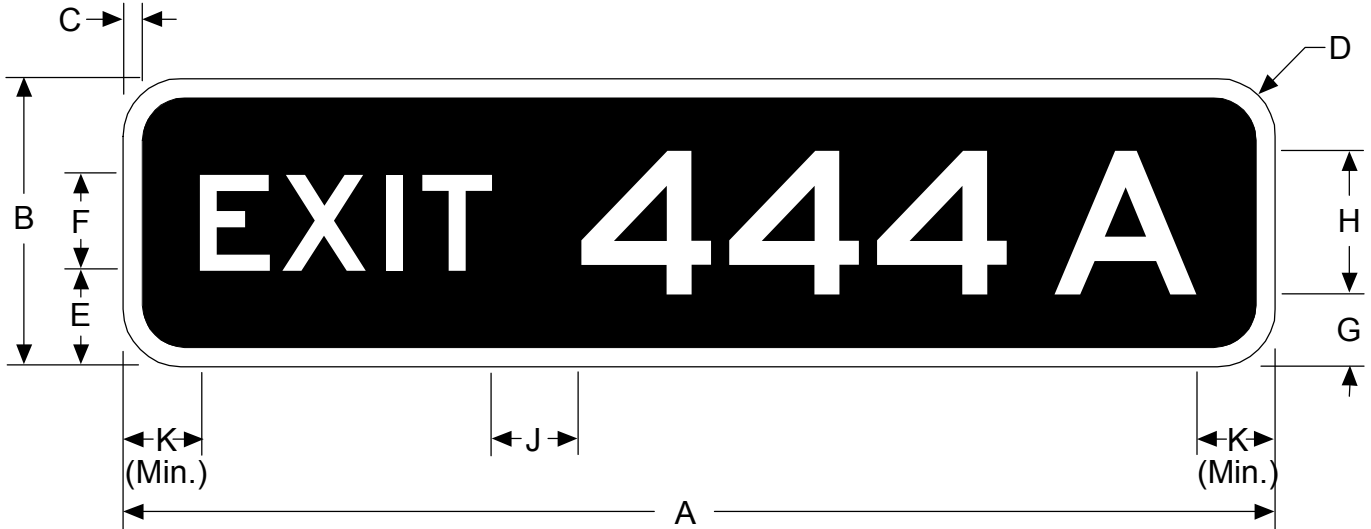

G70-3 (CA)

NOTES:

The exit number/suffix should be the same height as the lower case lettering used for the destination message on the guide sign. When the destination message is all capital lettering, the exit number/suffix should be the same height as the capital lettering.

When the exit number includes a suffix letter, the suffix letter is separated from the number by a space.

ENGLISH UNITS

A	B	C	D	E	F	G	H	J	K
48	12	1-1/4	3	4	4E	3	6E	4	3-1/8
66	15	1-1/2	3	5	5E	3-1/2	8E	6	5-3/8
78	18	2	3	6	6E	4	10E	6	5-5/8
96	24	2	6	8	8E	6	12E	8	6-1/4
120	30	2-1/2	6	10	10E	7-1/2	15E	10	7-3/4

**COLORS: BORDER & LEGEND - WHITE (RETROREFLECTIVE)
BACKGROUND - GREEN (RETROREFLECTIVE)**